


# HL4K PLATFORM LIFT INSTRUCTIONS

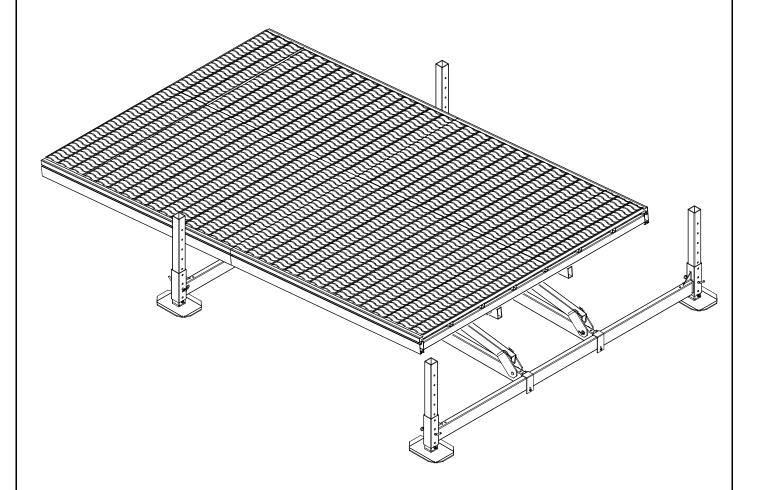

REIMANN & GEORGER CORPORATION MARINE PRODUCTS

**BUFFALO, NY** 6/19/15

P/N 6114---

## TABLE OF CONTENTS

CHAPTER	TITLE	PAGE			
1	SAFETY	1			
1.1	Introduction	1			
1.2	Safety Definitions	1			
1.3	Equipment Safety Labels	1			
1.4	Safety Rules	1			
2	INSTALLATION AND SETUP	3			
2.1	Pre-Installation Checks	3			
2.2	Tools Required	3			
2.3	HL4K (48" & 60") Drilling and Pivot Plate Mounting	3			
2.4	HL4K Platform Main Support Tube	7			
2.5	HL4K Platform Assembly				
3	PARTS LISTS	9			
3.1	HL 4K Platform Liftt Carton of Parts				
	LIST OF FIGURES				
FIGURE	DESCRIPTION	PAGE			
2-1A	HL4K (48" Lift) Drilling Liftarms	1			
2-2A	HL4K (48" Lift) Drilling Liftarms (Views A & B)	4			
2-1B	HL4K (60" Lift) Drilling Liftarms				
2-2B	HL4K (60" Lift) Drilling Liftarms (Views A & B)				
2-3	HL4K (48" & 60" Lift) Mount Liftarm Pivot Plates	6			
2-4	HL4K (48" & 60" Lift) Main Support Tube Mount				
2-5	HL4K (48" & 60" Lift) Platform Assembly				

#### 1 SAFETY

#### 1.1 INTRODUCTION

Our Reimann & Georger Corporation Marine Products HL Platform Lift is designed to lift boat by platform. Always place boat or equipment toward center of the lift to prevent lift tipping or platform failure. Your Platform Lift is well designed and well built. However, like any other equipment, it can malfunction or become hazardous in the hands of an inexperienced and/or untrained user. Therefore, read this manual and your related Hydraulic Lift manual, and related equipment manuals thoroughly before installing this kit and operating your lift to provide maximum safety for all operating personnel, and to get the maximum benefit from your equipment.

#### 1.2 SAFETY DEFINITIONS

A safety message alerts you to potential hazards that could hurt you or others or cause property damage. The safety messages or signal words for product safety signs are **DANGER**, **WARNING**, and **CAUTION**. Each safety message is preceded by a safety alert symbol and is defined as follows:

**DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** cause death or serious injury. This safety message is limited to the most extreme situations.

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in minor or moderate injury. It may also be used to alert against unsafe practices and property-damage-only accidents.

#### 1.3 EQUIPMENT SAFETY LABELS

These labels warn you of potential hazards that could cause injury. Read them carefully. If a label comes off or becomes illegible, contact a Reimann & Georger Corporation dealer for a replacement.

#### 1.4 SAFETY RULES



### **WARNING:**

DO NOT INSTALL THIS KIT AND OPERATE THE LIFT WITHOUT READING BOTH THIS MANUAL AND YOUR HYDRAULIC LIFT MANUAL. FAILURE TO DO THIS CAN LEAD TO EQUIPMENT MISUSE WITH RESULTING DAMAGE AND/OR SERIOUS PERSONAL INJURY. CONTACT YOUR RGC® MARINE DEALER IF YOU HAVE ANY OUESTIONS.

- 1. Do not install this kit without first replacing any damaged or defective parts.
- 2. The Platform kit does not increase the rated capacity of the lift. Never use the lift beyond its rated capacity. This can damage the kit assembly, lift, and/or boat with resulting serious personal injury.
- 3. Never try using any part of this kit in an application for which it was not designed.
- 4. Do not weld or otherwise modify any part of this kit. Such alterations may weaken the structural integrity of the lift and void the warranty.
- 5. The following precautions must be observed when lifting any part of this equipment:
  - a. Be sure of your footing.
  - b. Bend your knees and lift with your legs.
  - c. Hold the equipment section close to your body when lifting.
- 6. After the Platform kit is installed, the safety checks in Steps 7 through 24 must be performed on your lift prior to operation. Details on these checks are given in your vertical lift manual.
- 7. Before allowing anyone to operate the lift, be sure they fully understand the proper operating procedure.

- 8. Do not operate the lift under the influence of drugs, alcohol, or medication.
- 9. Keep people and pets clear during operation of the lift.
- 10. Keep fingers and clothing clear of all moving parts.
- 11. Never allow people in the boat any time it is suspended above the water on the platform.



#### **WARNING:**

DO NOT STAND OR WALK ON THE PLATFORM WHILE IT IS IN ANY RAISED POSITION. THIS CAN CAUSE SERIOUS PERSONAL INJURY.

- 12. Do not allow anyone to swim or play under, near or on the lift at any time.
- 13. Insure that all bolts and nuts are fastened securely on both this kit and the lift prior to operation.
- 14. Insure that the frame is level and square.
- 15. Completely remove any user or dealer installed locking devices before operating the lift.
- 16. Ensure the center of gravity of the boat is between forward tube and rear foot plates. The boat must be secured on the lift before raising or lowering. Failure to do this can cause equipment damage and/or serious personal injury.
- 17. The boat must be stored with the lift in the over center position.
- 18. A clear visual path is required when using remote transmitter. Obstacles, radio frequency interference, and weak transmitter batteries will degrade the performance and range of your remote transmitter.
- 19. Never adjust or service the lift during operation or while connected to the control box.
- 20. Do not adjust components in the control box while operating the lift.
- 21. Completely lower the platform before performing any type of maintenance or repair.



#### **WARNING:**

ALL ELECTRIC DRIVES MUST BE INSTALLED AND INSPECTED BY A CERTIFIED ELECTRICIAN IN ACCORDANCE WITH LOCAL ELECTRICAL CODES. THIS INSTALLATION MUST INCLUDE A PROPERLY WORKING GROUND FAULT CIRCUIT INTERRUPTER. (G.F.C.I.)

- 22. Never use the lift to hang or store any auxiliary equipment such as boating hardware.
- 23. At end of operation, secure the control box and the lift to prevent unauthorized use. Never assume you will find the equipment in the same condition in which you left it.
- 24. Never operate the remote control or hydraulic power unit when connecting or disconnecting hydraulic hoses.

#### 2 INSTALLATION AND SET UP

#### 2.1 RE-INSTALLATION CHECKS

- 1. Do not assemble this kit or any other component of the lift if any part appears to be damaged.
- 2. Do not weld or other wise modify any portion of the lift. Such alterations may weaken the structural integrity of the lift and void the warranty.

#### 2.2 TOOLS REQUIRED

- 1. 9/16", 3/4" & 1-1/8" Wrenches or Adjustable Wrench.
- 2. Drill Motor.
- 3. 13/32 & 17/32" drill bit.

## 2.3 HL4K (48" & 60" Lifts) LIFTARM DRILLING & PIVOT PLATES HL4K 48" lift only:

1. **Refer to Figure 2-1A & 2-2A.** Layout the holes shown in figure 2-1A & 2-2A. Drill 17/32" holes through front & rear liftarms.

#### HL4K 60" lift only:

2. **Refer to Figure 2-1B & 2-2B.** Layout the holes shown in figures 2-1B & 2-2B for HL5-7K-60" lift. Drill 17/32" holes through front and rear liftarms.

#### **Mount Pivot Plates:**

Refer to figure 2-3.

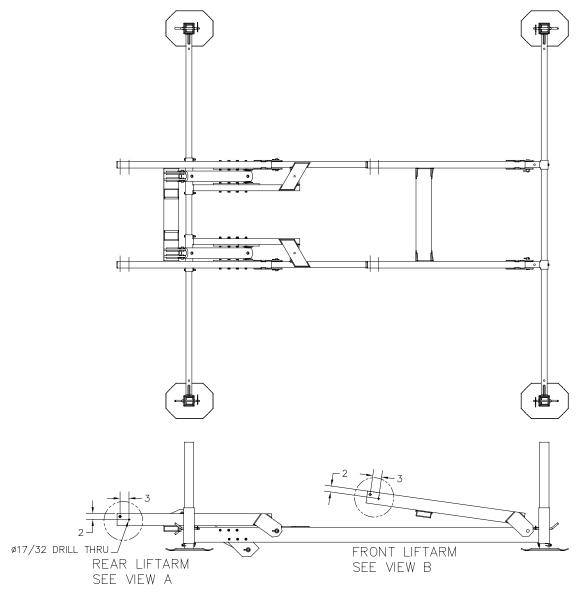


Figure 2-1A. HL4K (48" Lift) Drilling liftarms.

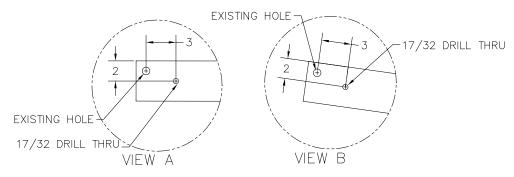


Figure 2-2A. HL4K (48" Lift) Drilling liftarms.

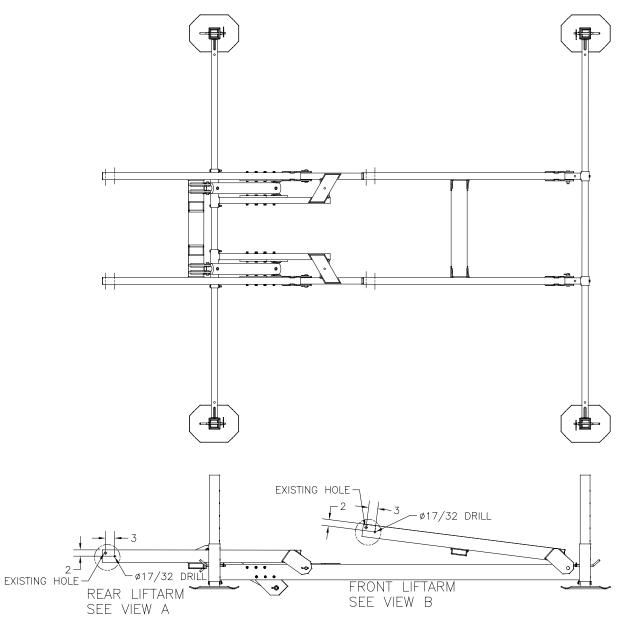


Figure 2-1B. HL4K (60" Lift) Drilling Liftarms.

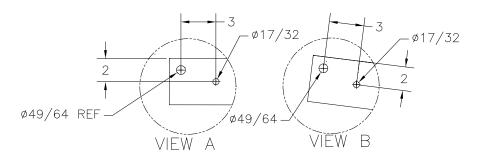


Figure 2-2B. HL4K (60" Lift) Drilling Liftarms.

## HL4K (48" & 60" Lifts) LIFTARM PIVOT PLATES MOUNTING

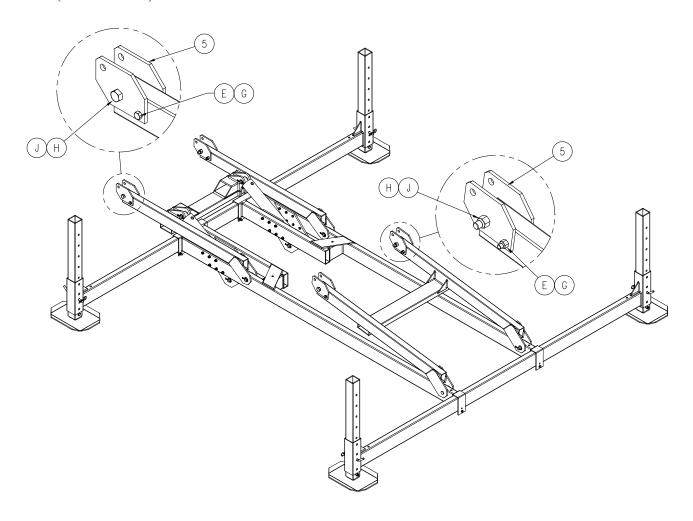


Figure 2-3. HL4K (48" &60" Lift) Mount Liftarm Pivot Plates.

## 2.4 HL4K PONTOON SUPPORT TUBE MOUNTING

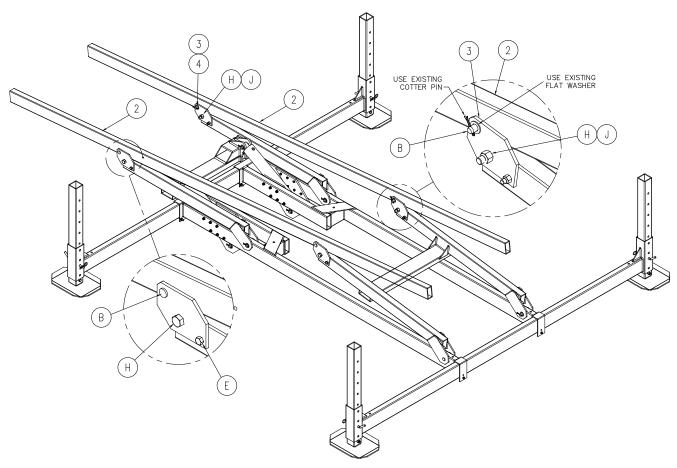


Figure 2-4. HL4K (48" & 60" LIFT) Main Support Tube Mounting

#### 2.5 HL4K PLATFORM ASSEMBLY

- 1. Position platform halves onto the main support tubes. Using hardware A, C & F, fasten the two half platforms together.
- 2. The platform must be fastened to the main support tubes. Use a 13/32"drill to drill holes in the main support tube.
- 3. Use hardware A, D & F to fasten the platform to the main support tubes.

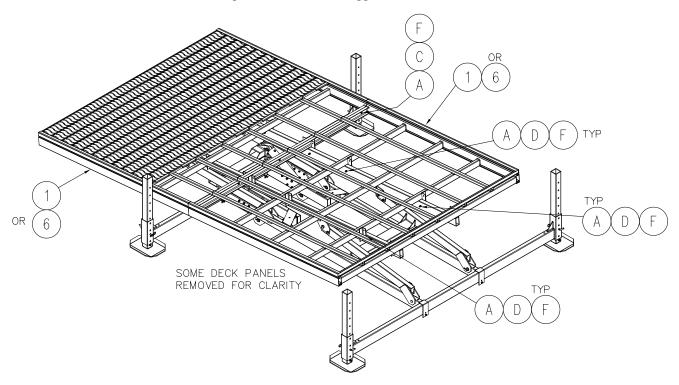


Figure 2-5. HL4K (48" & 60" Lift) Platform Assembly

## 3 PARTS LIST HL4K PLATFORM LIFT INSTRUCTIONS

## 3.1 4113010 HL4K PLATFORM LIFT 13' W x 10' L

Reference	Part Number	Quantity	Description
1	4113400	2	HL4K PLATFORM 10' X 6.5'
2	4113704	2	HL4K PLATFORM MAIN SUPT TUBE 156"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS 1/2-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK ½-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

#### 3.2 4113015 HL4K PLATFORM LIFT 10' W x 15' L

Reference	Part Number	Quantity	Description
1	4113405	2	HL4K PLATFORM 10' X 7.5'
2	4113703	2	HL4K PLATFORM MAIN SUPT TUBE 180"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS ½-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK ½-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

#### 3.3 4113020 HL4K PLATFORM LIFT 9' W x 16' L

Reference	Part Number	Quantity	Description
1	4113410	1	HL4K PLATFORM 9' X 8' LH
2	4113705	2	HL4K PLATFORM MAIN SUPT TUBE 192"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
6	4113415	1	HL4K PLATFORM 9' X 8' RH
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS ½-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK 1/2-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

## 3.4 4113025 HL4K PLATFORM LIFT 9' W x 15' L

Reference	Part Number	Quantity	Description
1	4113420	1	HL4K PLATFORM 9' X 7.5' LH
2	4113703	2	HL4K PLATFORM MAIN SUPT TUBE 180"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
6	4113425	1	HL4K PLATFORM 9' X 7.5' RH
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS ½-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK 1/2-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

#### 3.5 4113020 HL4K PLATFORM LIFT 10' W x 16' L

Reference	Part Number	Quantity	Description
1	4113430	2	HL4K PLATFORM 10' X 8'
2	4113705	2	HL4K PLATFORM MAIN SUPT TUBE 192"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS 1/2-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK ½-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

#### 3.6 4113--- HL4K PLATFORM LIFT 9' W x 14' L

Reference	Part Number	Quantity	Description
1	4113	1	HL4K PLATFORM 9' X 6' LH
2	4113	2	HL4K PLATFORM MAIN SUPT TUBE 168"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
6	4113415	1	HL4K PLATFORM 9' X 8' RH
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS ½-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK ½-13 SS/WAX
Н	5896183	4	HHCS ¾-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

## 3.7 4113--- HL4K PLATFORM LIFT 10.5' W X 14' L

Reference	Part Number	Quantity	Description
1	4113	1	HL4K PLATFORM 10.5' X 7' LH
2	4113	2	HL4K PLATFORM MAIN SUPT TUBE 168"
3	4107937	REF	HL A/V BUNK WASHER 1-3/4 OD X 1/8" (8) supplied with HL4K lift.
4	5894101	REF	PIN,COTTER 5/32 X 1-3/4 SS (4) supplied with HL4K lift.
6	4113	1	HL4K PLATFORM 10.5' X 7' RH
	4113200	1	HL4K PLATFORM Carton of Parts: includes
5	4107796	8	HL PLATFORM LIFTARM PIVOT PLATE
A	5897016	25	NUT HEX NYLOCK 3/8-16 SS
В	5894105	4	PIN, CLEVIS 3/4 X 4-1/8 SS
С	5896247	5	HHCS 3/8-16 X 1 SS
D	5896255	20	HHCS 3/8-16 X 3 SS
Е	5896292	4	HHCS 1/2-13 X 4 SS
F	5896406	25	WASHER FLAT SAE 3/8" SS
G	5897018	4	NUT HEX NYLOCK ½-13 SS/WAX
Н	5896183	4	HHCS 3/4-10 X 4-1/2 SS
J	5897014	4	NUT HEX NYLOCK ¾-10 SS

#### TWO YEAR LIMITED WARRANTY

#### Reimann & Georger Corporation Marine Products

This product is warranted by RGC® Marine Products to the original purchaser to be free from defects in material and workmanship under normal use for a period of two years from the date of purchase.

During the warranty period, and upon proof of purchase, the product will be repaired or replaced (with the same or similar model) at our option, without charge for either parts or labor when serviced at RGC® Marine Products.

Upon completion of repair, the unit will be returned to the customer freight prepaid. The warranty will not apply to this product if it has been misused, abused, or altered.

NEITHER THIS WARRANTY OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, SHALL EXTEND BEYOND THE WARRANTY PERIOD. NO RESPONSIBILITY IS ASSUMED FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.